

KoolTemp® GTS-218 Shipping System

Pre-Qualified Universal Cold Chain Shipper



Cold Chain Technologies' KoolTemp GTS series is the smart way to ship your temperature sensitive and valuable pharmaceutical and clinical products with confidence. Backed by the industries' widest selection of documented, pre-qualified solutions, our GTS series provides reliable and easy packouts for nearly all shipping conditions.

From small, overnight sample shippers to 5-day full size pallet shippers, Cold Chain Technologies offers many in-stock thermal packaging solutions to meet your frozen, refrigerated, or controlled room temperature needs.

continued on page 2



KoolTemp GTS-218

Pre-Qualified Universal Cold Chain Shipper



Recommended Use





- Domestic and international shipments of medium payloads of valuable vaccines, pharmaceutical products, and blood
- Payload area:
11" x 10-1/4" x 16-1/4" ID
- Outside dimensions:
20-3/4" x 20" x 23-1/2" OD

Prequalified for Time/Temperatures

- **Refrigerated Packout:** 72 hours of 2°C to 8°C protection
- **Room Temp Packout:** 120 hours of 15°C to 30°C protection
- **Frozen Packout:** 72 hours of -20°C protection using dry ice

Product Features

- Universal (year-round packout)
- Easy packout: a simple 1-2-3 packout using our Koolit® refrigerants
- Thoroughly tested: pre-qualified for minimum and maximum loads
- Environmentally safe: reusable shipper contains no ozone-depleting chemicals
- Ships knocked down or set up

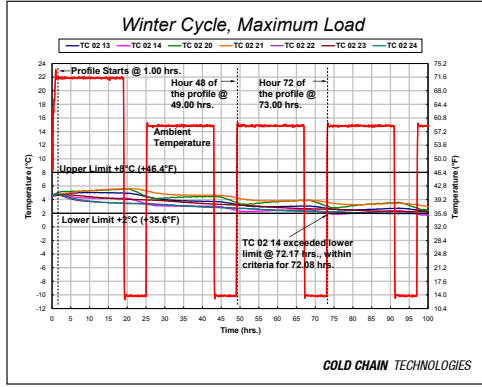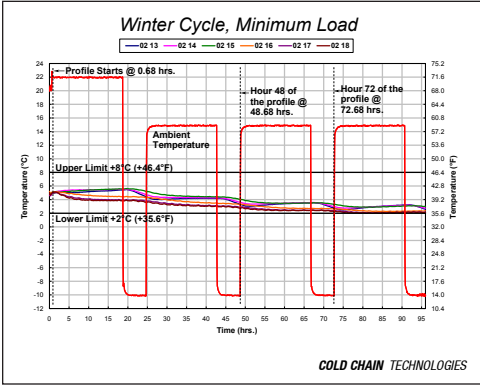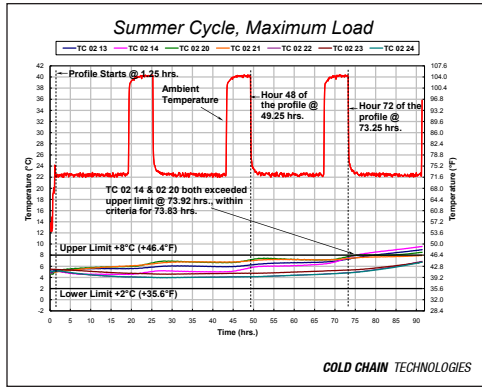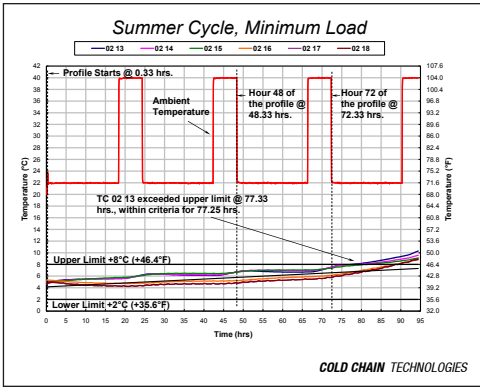

Time-temperature graphs illustrate performance of the KoolTemp GTS-218 under the varied testing conditions. Ambient temperatures are displayed with red lines, and 2°C to 8°C temperature boundaries are displayed with black lines. Internal payload temperatures measured by thermocouples during testing are shown with multiple colored lines.

continued from page 1

The GTS series' trouble-free and universal packout minimizes costs, including labor and turnaround time. Pre-charged Koolit bricks fit into a variety of carefully designed coolant compartments and sleeves away from the product area. Packout instruction information is printed on the lid or wall of each GTS container and is always available on our web site.

Each pre-qualified GTS series is fully documented at our ISTA-certified and cGMP-compliant labs under summer and winter conditions and at minimum and maximum loads. Payload specific qualifications are also available as needed.



29 Everett Street
 Holliston, MA 01746
 T: 800.370.8566 / 508.429.1395
 F: 508.429.9056
 W: www.coldchaintech.com
 E: info@coldchaintech.com